






IMPORTANT SAFETY INFORMATION. READ AND FOLLOW ALL SAFETY INSTRUCTIONS

IMPORTANT SAFETY INFORMATION. READ AND FOLLOW ALL SAFETY INSTRUCTIONS. Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker. All servicing or relamping must be performed by qualified service personnel. Product must be grounded to avoid potential electric shock or other potential hazard. Product must be at locations and at heights and in a manner consistent with its intended use, and in compliance with Electrical Code and local codes.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

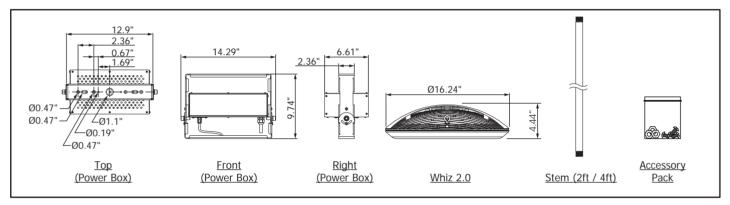

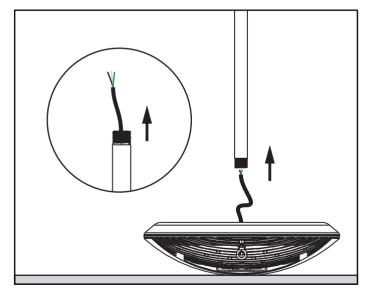

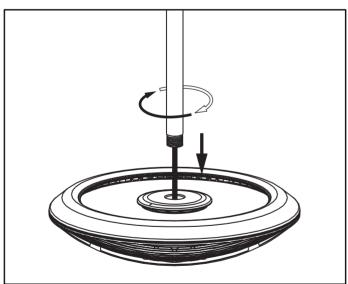


Step 1


Screw stem in place.

Step 2

Fixture cables go through the stem and all the way through.



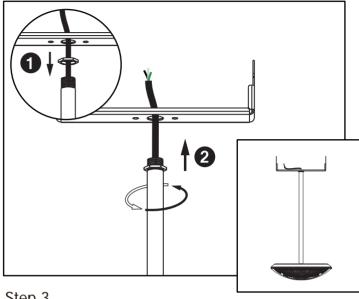


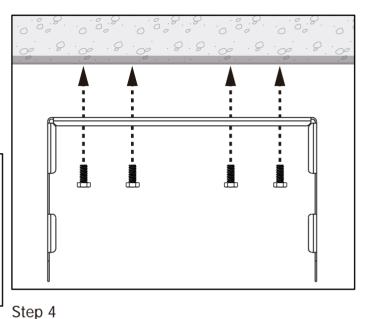


Step 3

First, push the cables through a Hex screw and tighten on stem grooves. Second, fasten the stem onto the lower bracket.

Fasten the top bracket on the desired location on the ceiling.

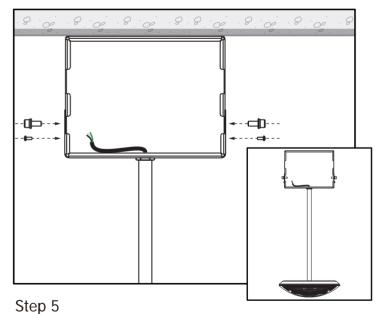


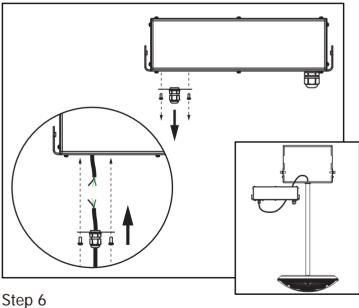

Align both lower and upper brackets and fasten in place.

Open the DC Junction box and connect cables. Refer to wiring diagram section.



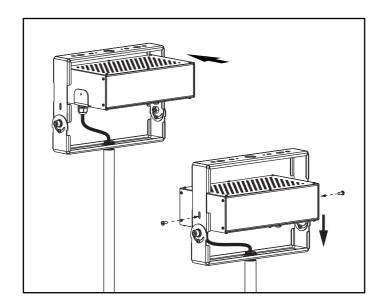


Step 7

Slip the power box hook fastener over the lock-in grooves allocated and fasten screws on either side to keep the power box in place.

Step 8

Hook the stabilizer.

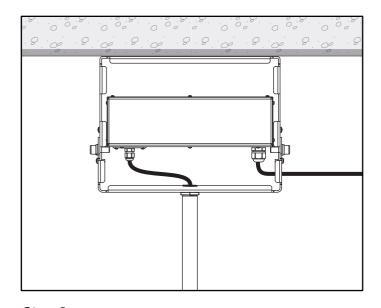


Step 9 Connect AC Cable to Junction Box.




Wiring Diagram


Standard0-10V (WS2.0-120 / WS2.0-170 / WS2.0-240)

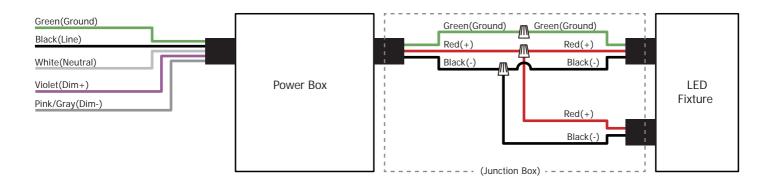

Standard0-10V (WS2.0-300)

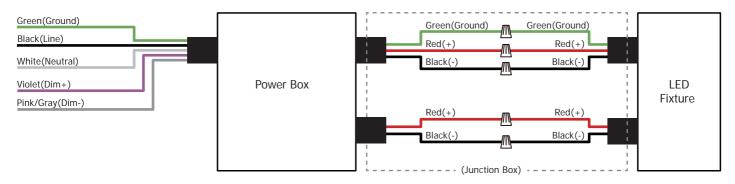


Superior 0-10V

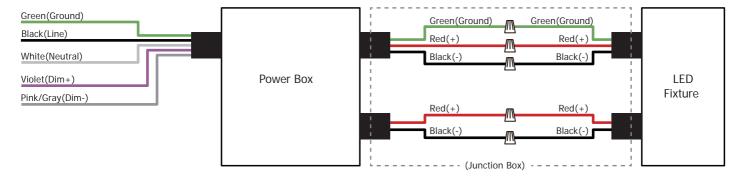





Wiring Diagram

Superior 0-10 V Tunable White (WS2.0-150)

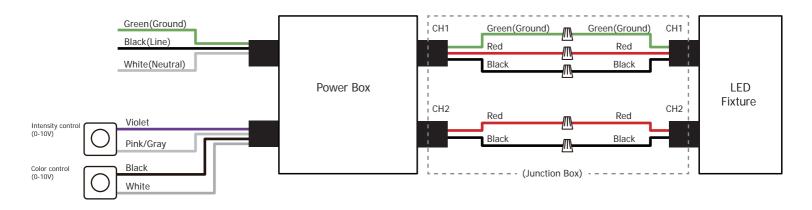

Superior 0-10 V Tunable White (WS2.0-300)

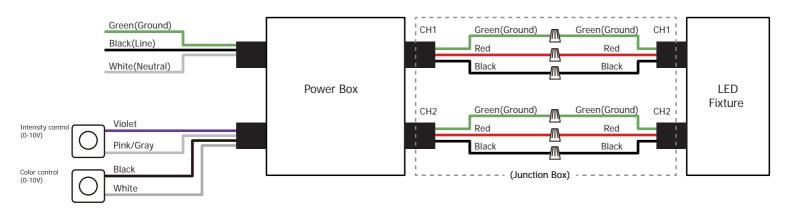

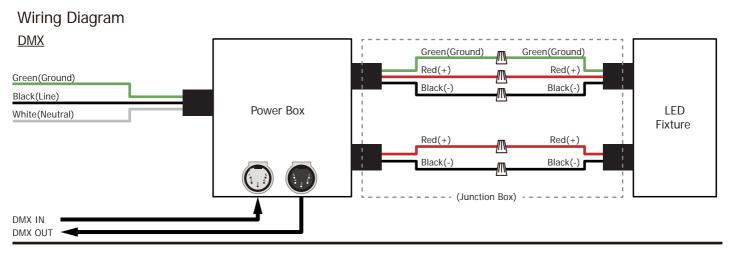

METEOR LIGHTING


P: 213.255.2060

F: 213.596.3704


www.meteor-lighting.com




DMX Tunable White (WS2.0-150)

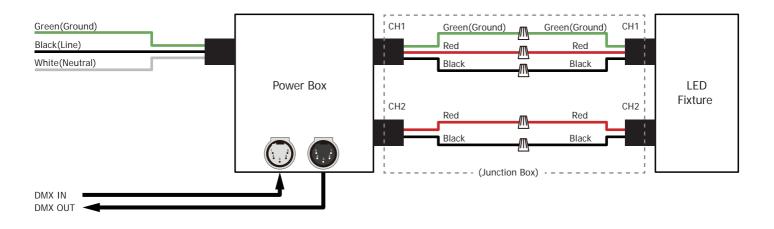

DMX Tunable White (WS2.0-300)

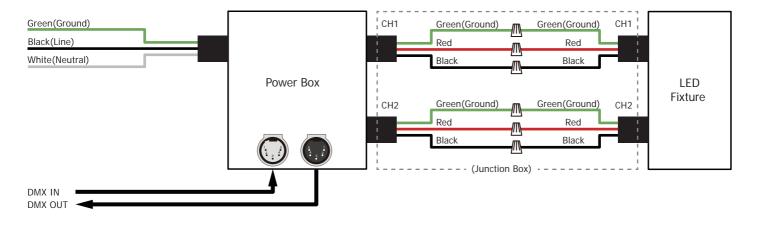

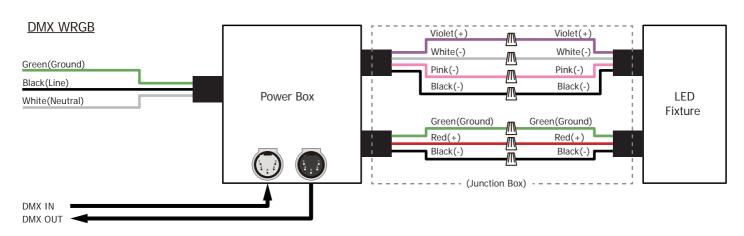

METEOR LIGHTING


P: 213.255.2060

F: 213.596.3704


www.meteor-lighting.com

Page 6



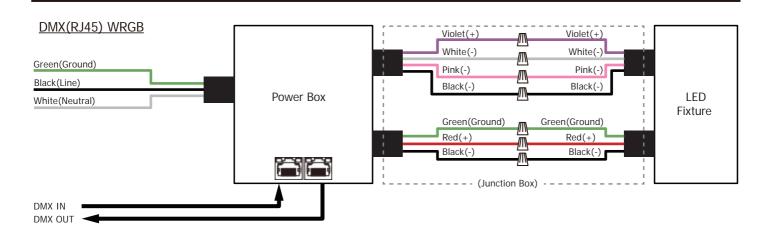

RJ45 Sockets XLR Sockets

 






DMX IN DMX OUT

| CONNECTION | RJ45 (CAT5e) | 5-PIN XLR |
|------------|----------------------------------|-----------|
| Common | WHITE/BROWN(PIN7) & BROWN(PIN 8) | PIN 1 |
| Signal - | ORANGE(PIN 2) | PIN 2 |
| Signal+ | WHITE/ORANGE(PIN 1) | PIN 3 |
| Spare | - | PIN 4 |
| Spare | - | PIN 5 |


DMX512 is connected using a daisy-chain methodology where the source connects to the input of the first device, the output of the first device connects to the input of the next device, and so on.

^{*}The last fixture has to be terminated with a DMX Terminator (by others).




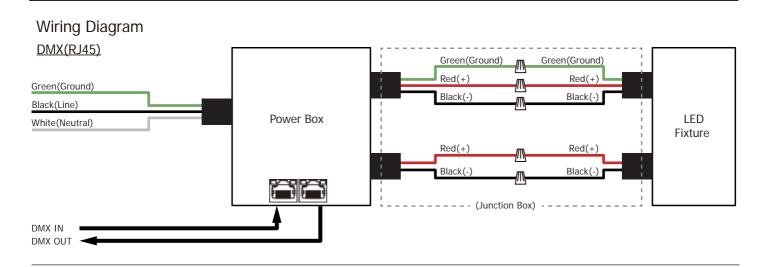

DMX(RJ45) Tunable White (WS2.0-150)

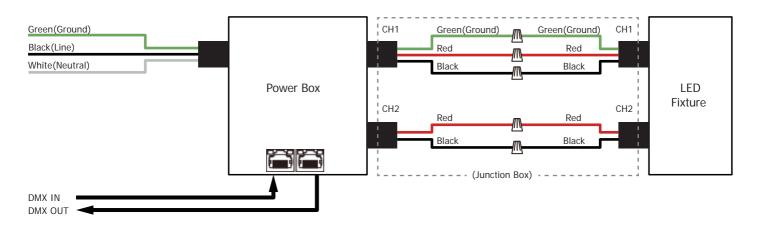

DMX(RJ45) Tunable White (WS2.0-300)

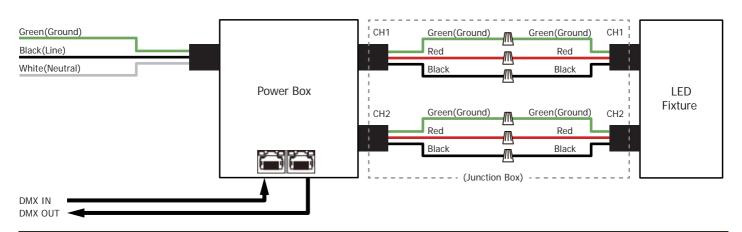

METEOR LIGHTING

P: 213.255.2060

F: 213.596.3704

www.meteor-lighting.com

Page 7