
# REV 6





- Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker.
- All servicing or relamping must be performed by qualified service personnel.
- Product must be grounded to avoid potential electric shock or other potential hazard.
- Product must be installed at locations and heights, in a manner consistent with its intended use, and in compliance with Electrical Code and local codes.


SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

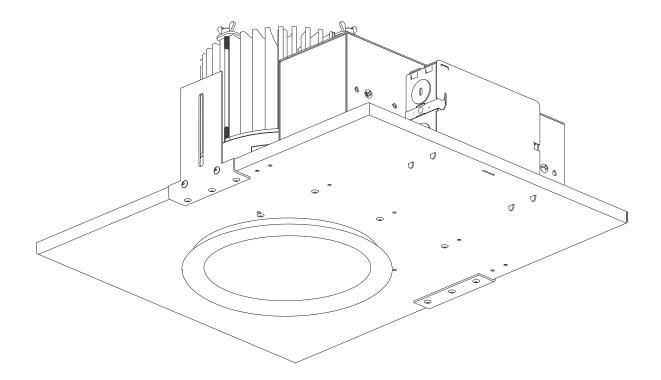


## INSTALLATION GUIDE

## **REV 6** NEW CONSTRUCTION


## METE<sup>O</sup>R

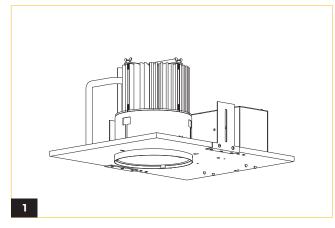

Mark the intended location of the luminaire and cut an 6.3" (160mm) diameter opening in the ceiling.

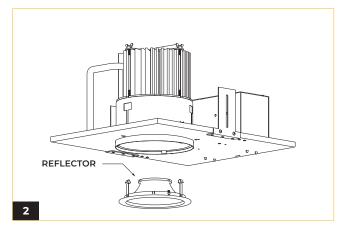

Separate REFLECTOR from fixture.

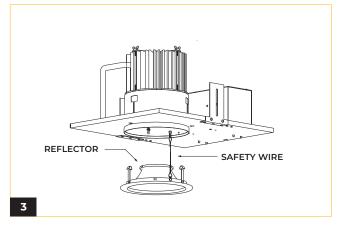


Make power connections. See Circuit Diagram below. Connect safety wire and push reflector into frame ensuring the trim is flush to the ceiling.


## **REV 6** NEW CONSTRUCTION

## METE<sup>O</sup>R


### WIRING DIAGRAM

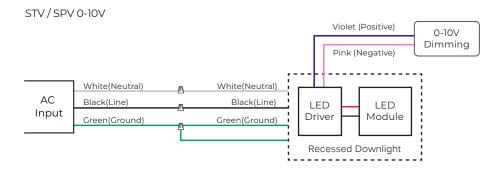


#### SPV 0-10V (Tunable White)

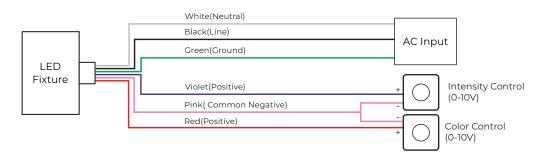

DMX

 

 

Connect DMX by using a standard shielded CAT5/6 cable.



Connect DMX by using a standard DMX512 XLR cable with 5 pin in/out connector (by others).




meteor-lighting.com 1300 John Reed Court, Unit B, City of Industry, California 91745 E: tech@meteor-lighting.com T: 213-255-2060 Meteor Lighting reserves the right to make changes to this product for design and development improvements at any time without prior notice, and such modification shall be effective immediately. ©Meteor Illumination Technologies, Inc.

## **REV 6** NEW CONSTRUCTION




#### WIRING DIAGRAM

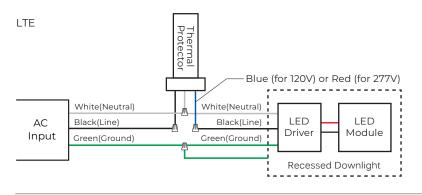


#### Compatible LTE Dimmer List

LUTRON PART NO	
MRF2-6ND-120	HQRD-6NA
RRD-6NA	HQRD-6N
RRD-10ND	DSZ-6ND
HQRD-10ND	


LDE1

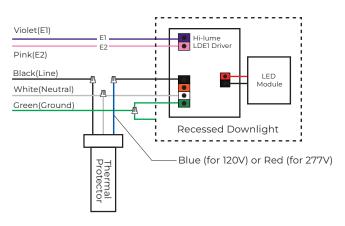

SPD

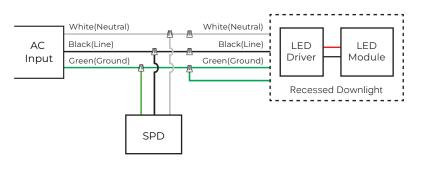

DALI

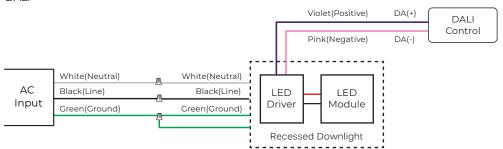

meteor-lighting.com 1300 John Reed Court, Unit B, City of Industry, California 91745 E: tech@meteor-lighting.com T: 213-255-2060 Meteor Lighting reserves the right to make changes to this product for design and development improvements at any time without prior notice, and such modification shall be effective immediately. ©Meteor Illumination Technologies, Inc.

## **REV 6** NEW CONSTRUCTION

## **METE**<sup>O</sup>R

### NOTES

### Application note : Wiring for DMX/RDM lighting systems

DMX/RDM is a robust and reliable system for lighting control. However, if not implemented correctly, problems can arise such as random flashing of lights, erratic operation and delays in responding to commands. This document explains the best practices in DMX wiring.

#### Important things to consider are:

- 1. DMX is a three-wire system. Use all three!
- 2. DMX is based on the EIA-485/RS-485 standard.
- 3. Always use cable specifically designed for DMX / RS-485. These cables have an impedance of  $120\Omega$  and a low capacitance. For instance : Belden 9729 or Belden 9841.
- 4. DMX must be terminated with a 120  $\!\Omega$  resistor to prevent reflections.
- 5. A daisy chain topology should be used.
- 6. After 32 unit loads a repeater/booster should be used. (Important : For tunable white fixtures, After "32" unit loads a repeater/booster should be used.)
- 7. Keep cabling below 200 meters between the controller and the last driver.
- 8. It is generally considered good practice to provide separate DMX in and DMX out / DMX Thru connections to your fixture to aid in installation. This can be in the form of pigtails, RJ-45 connectors or 5-pin XLR connectors.
- 9. Use twisted pair cables with an impedance of  $120\Omega$  and a low capacitance.
- 10. UTP Cat5 or Cat6 network cable can also be used but have a slightly lower impedance of  $100\Omega$ .
- 11. If shielded cable is used, only connect shield to ground on one side (typically, the controller should have its shield terminal connected to ground).
- 12. Not following the above recommendations may seem to work at first, but can cause problems. Sometimes after weeks of seemingly normal operation.